## CdYfUhjb[ = bghfi Whjcbg

## Harsh Location LED Luminaire

## **General Wiring Diagram**

CAUTION: Turn off electrical power at fuse A or circuit breaker box before wiring fixture to the power supply.

Connecting panels to AC source supply: All units must be individually connected to

 
the AC supply.

 
Brown = Line (According to customer choice L1, L2, L3) Blue = Neutral Green = Ground

158mn


## =bghU`Uhjcb'/ CdYfUhjcb

#### 9`YWfjWU'7cbbYWfjcb.






#### Installation

 


High Ceiling Mount :

Low Ceiling Mount :

 Expansion bolts




Eyebolt Mount :

 


Wall Mount :

 Safety rope Mount :





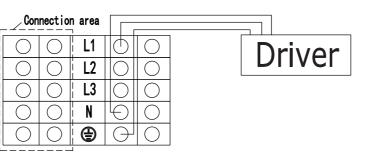

Unit: mm


Unit: mm

# @bYUf'<Ufg\'GYf]Yg

## **Operating Instructions**

## Harsh Location LED Luminaire

Pole Mount Clamp :

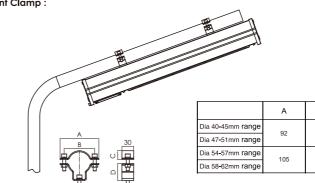

## Servicing

- To avoid personal injury, disconnect power to the light and allow the unit to cool down before performing maintenance.
- Perform visual, electrical, and mechanical inspections on a regular basis. The environment and frequency of use should determine this. However, it is recommended that checks should be made at least once a year. Frequency of use and environment should determine this.
- The external lens should be cleaned periodically to ensure continued luminaire performance. Clean the lens with a clean, damp, non-abrasive, lint-free cloth. If this is not sufficient, use a mild soap or a liquid cleaner. Do not use an abrasive, strong alkaline or acid cleaner as damage may occur. Organic solvent is absolutely forbidden to soak the lens.
- Inspect the cooling fins on the luminaire to ensure that they are free of any contamination (i.e. excessive dust build-up). Clean with a non-abrasive cloth if needed.
- Mechanically check to make sure all parts are properly assembled.
- Electrically check to make sure that all connections are clean and tight.

### Housing

- Shell surface of electrostatic spraying, Long lasting and Durable
- Shell protection, Over-voltage and Over-heat protection fasteners
- Exposed fasteners with quality stainless steel
- Excellent anti-corrosive property

В	С	
72	17.5	
84	27.5	

#### Linear Harsh Series

## Harsh Location LED Luminaire

#### Warranty

We warrant that each of our LED lighting luminaire (the "Product(s)") that are purchased while this Warranty is in effect will be free from defects in materials and workmanship for the period of time specified in the table below (the "Warranty Period"). The Warranty Period runs from the date of original purchase from its authorized distributor/dealer.

We will repair, or at our option, replace the defective product (exterior finish, housing and heat sinks, lens, LED engine, power supply) during the standard warranty period. This warranty applies only to the repair or replacement of the product and only when the product is properly handled, installed and maintained according to our instructions.

This warranty excludes defects resulting from improper installation, acts of God, fire, vandalism or civil disturbances, power surges or improper power supply, and corrosive environment installations.

This warranty does not cover equipment, systems or components from other manufacturers that the Purchaser uses in conjunction with the Product. Any repair, alteration or modification of the Product, including replacement of Product components with components of other manufacturers will void the warranty in its entirety.

LED Product	Models Covered by Warranty	Warranty Period
Harsh Location LED Luminaire	LNH Series	Five (5) Years

#### Limitation of Liability

THE FOREGOING WARRANTY IS EXCLUSIVE, AND IS THE SOLE REMEDY FOR ANY AND ALL CLAIMS, WHETHER IN CONTRACT, IN TORT OR OTHERWISE ARISING FROM THE FAILURE OF PRODUCT AND IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ALL WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH WARRANTIES ARE HEREBY EXPRESSLY DISCLAIMED TO THE EXTENT PERMITTED BY LAW AND, IN ANY EVENT, SHALL BE LIMITED TO THE WARRANTY PERIOD SPECIFIED ABOVE. THE LIABILITY OF SHALL BE LIMITED TO THE TERMS OF THE EXPRESS WARRANTY SET FORTH HEREIN. IN NO EVENT WILL BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES INCLUDING, WITHOUT LIMITATION, DAMAGES RESULTING FROM LOSS OF USE, PROFITS, BUSINESS OR GOODWILL, LABOR COSTS, REMOVAL OR INSTALLATION COSTS, DECREASE IN THE LIGHT OUTPUT OF THE LAMP, AND/OR DETERIORATION IN THE LAMP'S PERFORMANCE, WHETHER OR NOT HAS BEEN ADVISED OF THE POSSIBILITY THEREOF. UNDER NO CIRCUMSTANCES SHALL 'S ENTIRE LIABILITY FOR A DEFECTIVE PRODUCT EXCEED THE PURCHASE PRICE OF THAT PRODUCT. WARRANTY SERVICES PROVIDED UNDER THESE TERMS AND CONDITIONS DO NOT ENSURE THE UNINTERRUPTED OPERATION OF PRODUCTS; SHALL NOT BE LIABLE FOR DAMAGES CAUSED BY ANY DELAYS INVOLVING WARRANTY SERVICE.

This Limited Warranty gives you specific legal rights and you may also have other rights that may vary from state to state. Because some states or jurisdictions do not allow the exclusion or limitation of liability for consequential or incidental damages, this limitation may not apply to you.

## **Operating Instructions**

## Harsh Location LED Luminaire

#### **General Safety Information**

- To reduce the risk of death, personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions and other hazards, please read all warnings and instructions included with and on the fixture box and all fixture labels.
- · Before installing, servicing, or performing routine maintenance upon this equipment, please follow these general precautions.
- Commercial installation, service and maintenance of luminaires should be performed by a gualified licensed electrician.
- DO NOT INSTALL DAMÁGED PRODUCT!
- This fixture is intended to be connected to a properly installed and grounded UL listed junction box.
- Make sure that the supply voltage is the same as the luminaire voltage. Do not install where the marked operating temperatures exceed the ignition temperatures of the hazardous atmosphere.
- Do not operate in ambient temperatures above those indicated on the luminaire nameplate.
- All gasket seals must be clean and undamaged.

#### WARNING:

#### **RISK OF ELECTRICAL SHOCK**

- Turn off electrical power at fuse or circuit breaker box before wiring fixture to the power supply.
- Turn off the power when you perform any maintenance.
- Verify that supply voltage is correct by comparing it with the luminaire label information. Make all electrical and grounded connections in accordance with the National Electrical
- Code and any applicable local code requirements.
- All wiring connections should be capped with UL approved wire connectors. • Luminaire must be supplied by a wiring system with an equipment grounding conductor.

### CAUTION:

#### **RISK OF INJURY**

- Wear gloves and safety glasses at all times when removing luminaire from carton, installing, servicing or performing maintenance.
- Avoid direct eye exposure to the light source while it is on.
- · Account for small parts and destroy packing material, as these may be hazardous to children.

#### CAUTION:

## **RISK OF FIRE**

LNH-2-3-4-5-6-7

- 2 Wattage 25 25W, 50 50W, 75 75W, 100 100W
- 3 Voltage 100-240 V AC
- 4 Color Temperature 57K 5700K, 5K 5000K, 4K 4000K, 27K 2700K, RD-Red, GN-
- Green, BU-Blue, AM-Amber
- 5 Lens CG Clear PC, DP Diffuse PC
- 6 Battery BLANK Standard (Non Emergency), EM12 12W 90mins (Emergency)
- 7 Cable Entries M20 4 X M20 X 1.5, M25 4 X M25 X 1.5





Picture is for illustration purposes only. Your model may vary

Page: 1 REV: A 1.0